

# SANSUI

# VIDAA

## INSTRUCTION MANUAL



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



### **ENERGY STAR® Qualification.**

Enabling certain features and functionality in this product (e.g. Picture Mode, Volume) may increase its energy consumption, possibly beyond the limits required for ENERGY STAR® qualification.

This product has earned the ENERGY STAR® qualification meeting US Federal Energy Efficiency guidelines as established by the Department of Energy and Environmental Protection Agency. The ENERGY STAR® program exists to provide energy saving guidelines and help promote energy efficient products and practices.

**Power Saving Mode** is the mode in which the product qualifies for ENERGY STAR®.

### IMPORTANT

Please read this manual carefully before installing and operating the TV

Keep this manual handy for further reference



GQTVOMVW02

# Content

---

<b>Safety Information</b> .....	1
<b>Important Safety Precautions</b> .....	2
<b>TV Buttons And Terminal Interface</b> .....	3
<b>External device connection diagram</b> .....	3
<b>TV Install And Connect.</b> .....	4
<b>TV Stand Installation Instructions</b> .....	4
<b>OSD</b> .....	5
First Time Installation. ....	5
HOME .....	6
INPUT .....	6
Initial Setup. ....	7
System .....	10
Media .....	12
<b>Help.</b> .....	14
<b>Specifications</b> .....	15
<b>Remote Controller.</b> .....	16
<b>Warranty</b> .....	17

# Safety Information

	<b>CAUTION / ATTENTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN RISQUE D'ELECTROCUTION. NE PAS OUVRIR.	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

<b>WARNING:</b> TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
<b>CAUTION:</b> TO PREVENT ELECTRIC SHOCK. DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**WARNING:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

## FCC Declaration of Conformity Compliance statement (Part 15):

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The party responsible for compliance to these rules is:



GLOBAL Q INTERNATIONAL Ltd.  
3471 N. Union Drive Olney, IL 62450  
Ph:1-618-392-3456

# Important Safety Precautions

- 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.
- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.



## Caution:

 
- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.
- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth
- 25) The maximum using environment temperature is 45 degrees.  
The Maximum using altitude is 2000 meters

# TV Buttons And Terminal Interface

## TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.



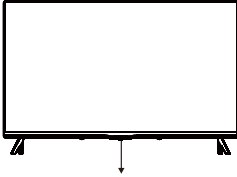




**One key:**



Note: Picture for reference purposes only.

Press this button in standby mode to turn on / off the TV.

 
 
 
 
## Terminal Interface

 <b>AV IN</b>	<b>AV input</b> External AV Signal Input and Right/Left Audio Inputs.	 <b>RJ 45</b>	<b>RJ45</b> Connect to the Internet.
 <b>HDMI</b>	<b>HDMI Input</b> Connect to a HDMI output connection on your external device.	 <b>USB</b>	<b>USB Input</b> Connect to your USB device.
 <b>ANT 75Ω</b>	<b>ANT 75/RF Connection</b> Connect to the antenna/cable TV output of your device or wall plate.	 <b>OPTICAL</b>	<b>OPTICAL</b> Digital Audio Output.
 <b>EARPHONE</b>	<b>EARPHONE output</b> When earphones are plugged in, speakers are disabled.		





\* Please discontinue use of any device using the USB mode before connecting, disconnecting or adjusting the HDMI or USB terminal ports. Failure to do so can result in an electrostatic discharge that could cause damage to the TV and/or its operation.

# External device connection diagram

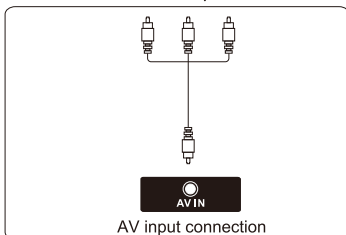

# TV Install And Connect

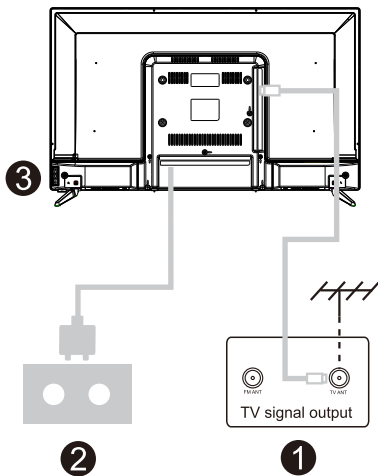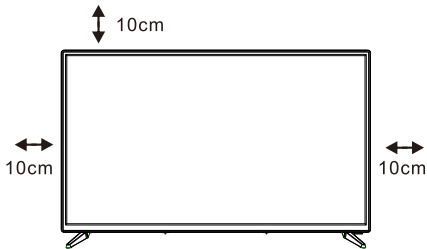  

### Set your TV

To put your TV on a firm place which can bear the weight of the TV.  
To avoid danger, please don't positions the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

### Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

\*The attached power cord is for this model only.

### Turn on TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV

Note: If the model has a CI card slot on its top and includes a silicone plug in the packaging, please insert the silicone plug into the slot when no CI card is in use. No action required for models with a slot but without a silicone plug.



**Note:** Picture for reference purposes only.

# TV Stand Installation Instructions

### Stand Installation Guide

The TV is packaged with the TV stand separated from the cabinet. To setup the TV table stand, please carry out the installation according to the instructions below.

1. The panel can be scratched easily, so please:

 
Place a soft cloth on the table and place the TV face down on the cloth.

Note: Always unplug the AC cord first when installing/removing the stand.

2. Take the base. Please align the screw holes of the base and the TV, and then insert the screws into the holes on the base and tighten them.

Note: To ensure that the TV is stable, please tighten all screws.

The stand of some TV models is designed with snap-in type, easily installed by snapping into stand groove, instead of screw.

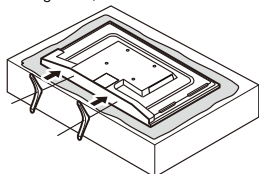

Please take note of the base direction:




The bottom view of the TV  
(Front cabinet faces down)

(The illustration is for reference only. Please prevail in kind)

### Suggestion:

 To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

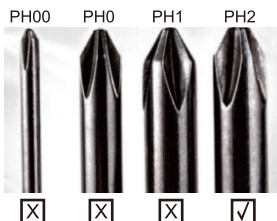


## First Time Installation


### First Time Installation

---

 Please according to the Text Tip to First Time Setup.  
Press 【▼】 / 【▲】 button to select Language.

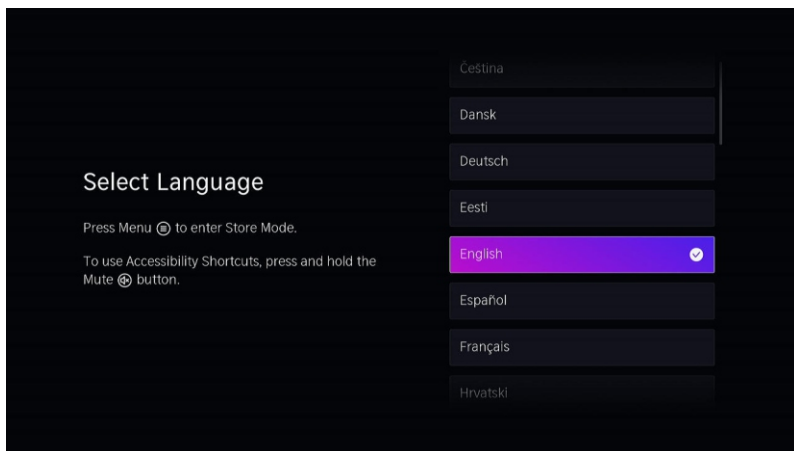

 
Please make sure the device has connected,  
then press 【▼】 / 【▲】 button to select the TV name.

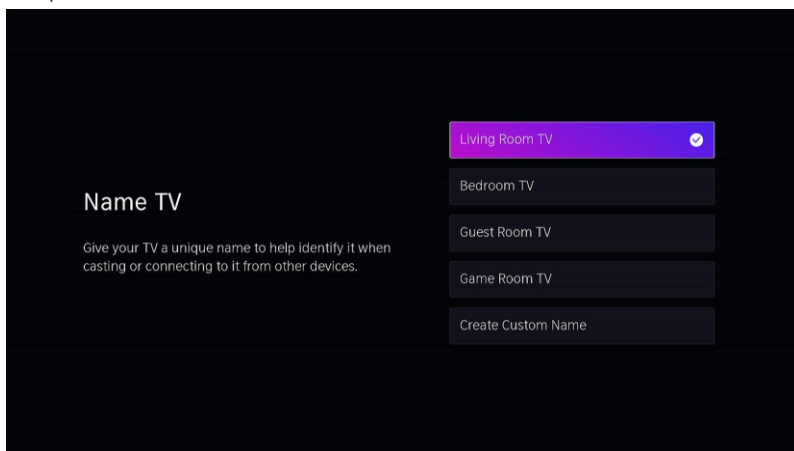

## HOME

### HOME

 Press "HOME/🏠" button, you can enter HOME screen.

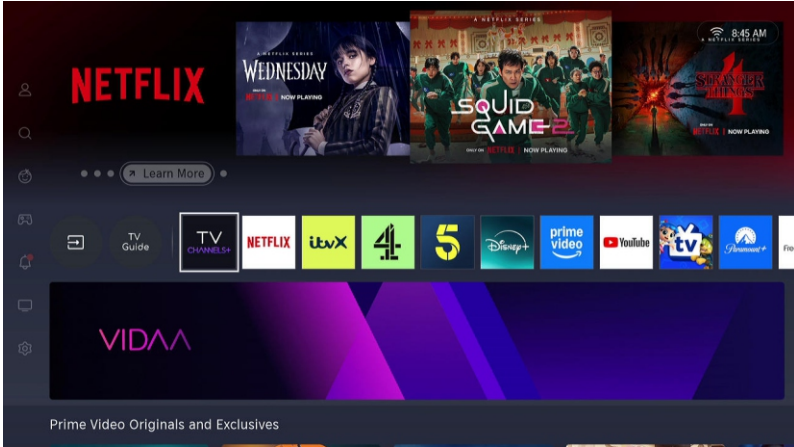


\*Some countries home screen UI may display different from above image, please refer to the product for details.

- Manage apps
- Select the item you want to move, then press the  button to manage.

## INPUT
 
### Input

Press [▼] / [▲] button to select Inputs menu.  
Press ENTER to select input.

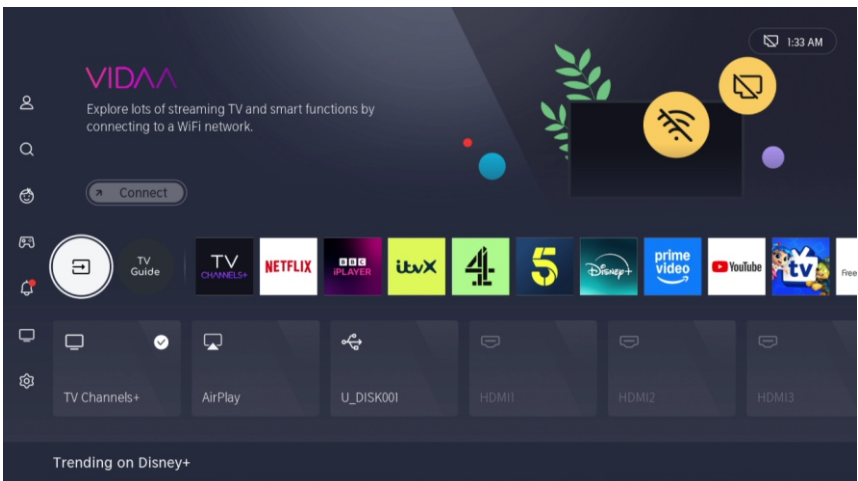


# Initial Setup

## Picture

Press **[MENU]** to enter the main menu, press **[▼]** / **[▲]** to select picture menu.

 1. Press **[▼]** / **[▲]** button to select the option that you want to adjust in the PICTURE menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

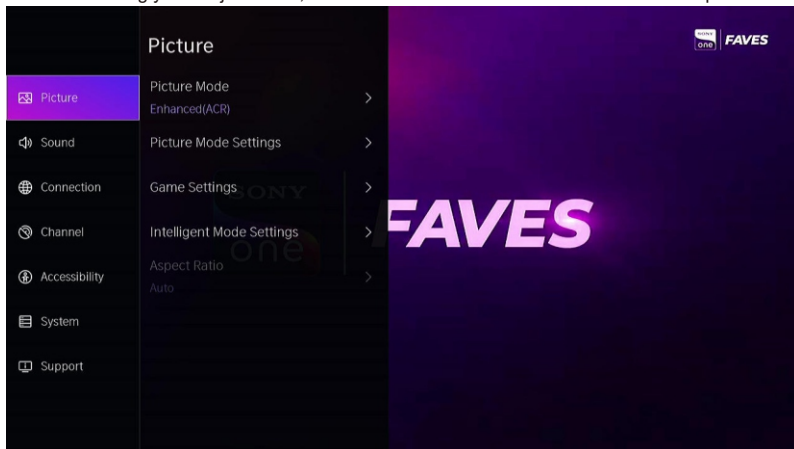

### Picture Mode

Press **[▼]** / **[▲]** button to select Picture Mode, then press **[▼]** / **[▲]** & Enter button to select. (Optional: Standard/Cinema day/Cinema night/Dynamic/Sports).

### Aspect Ratio

Adjust the Aspect Ratio to stretch or zoom in on your picture.

Press **▼** / **▲** button to select Aspect Ratio.

 
Press **◀** / **▶** button to select Automatic/16:9/4:3/Panoramic/Movie Zoom/Direct.

### Game Mode

Press **[▼]** / **[▲]** to select, and press **[◀]** / **[▶]** to select On/Off.

### Picture Mode Settings


Press **[▼]** / **[▲]** to select, and press **[▶]** & ENTER to enter.

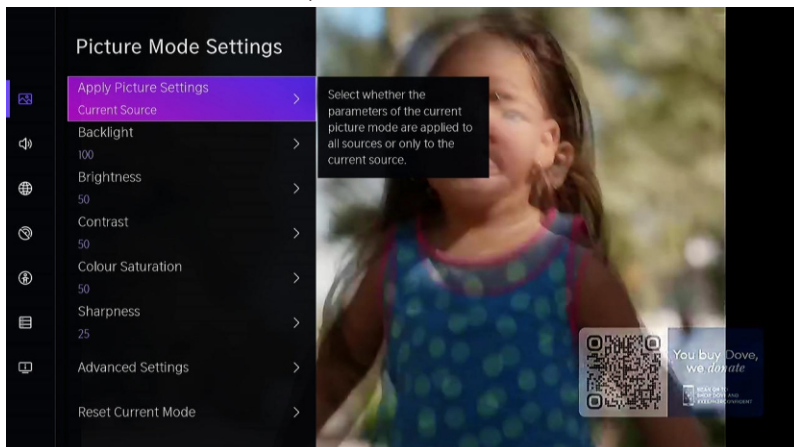

# Initial Setup

## Sound

 Press **MENU** button to display the main menu. Press **▼** / **▲** button to select **SOUND** in the main menu,

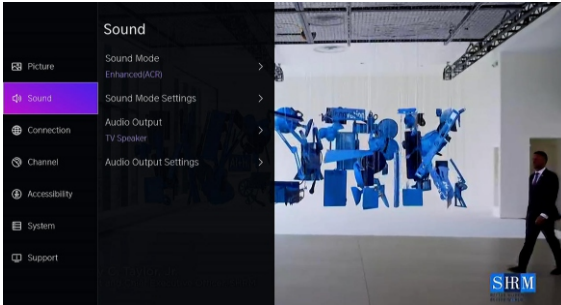


1. Press **▼** / **▲** button to select the option that you want to adjust in the **SOUND** menu.
2. Press Enter button to adjust.
3. After finishing your adjustment, Press Enter button to save and return to the previous menu.

## Audio Output

 Press **▼** / **▲** button to select Audio Output.

Press **ENTER** / **▶** button to enter sub-menu,


then press **▼** / **▲** button to select ARC/TV Speaker/SPDIF Only.

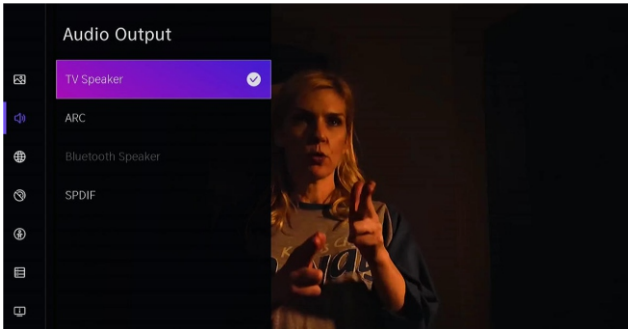

**\*Note: Bluetooth is optional, whether it supports Bluetooth function is subject to the actual configuration!**

## Network

 Press **MENU** button to display the main menu. Press **▼** / **▲** button to select **Network** in the main menu.

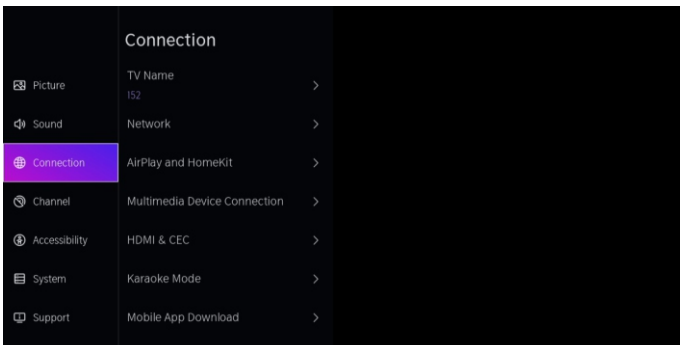


# Initial Setup

Press [▼] / [▲] button to select :Network Configuration/Internet Connection/ Wake on Wireless Network/Wake on LAN.


## Channel

 Press MENU button to display the main menu. Press [◀] / [▶] button to select Channel.

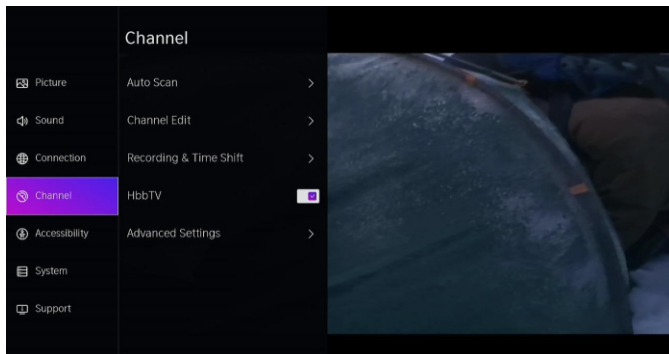

- 1.Press [▼] / [▲] button to select the option that you want to adjust in the Channel menu
- 2.Press Enter button to adjust.
- 3.After finishing your adjustment, Press Enter button to save and return to the previous menu.

## Visually Impaired and Hearing Impaired Auxiliary function

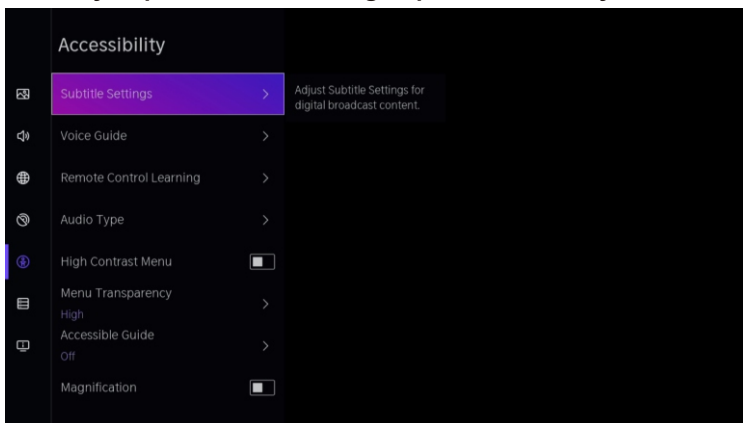 

### 1.Audio Description Feature (for the visually impaired)

Introduction: Audio description is short for 'verbal description of images' and is intended for visually impaired users. By adding additional voice commentary, it provides auxiliary descriptions for visual media such as television, films, and TV dramas, helping visually impaired users understand visual information that would otherwise be inaccessible, such as scenes, facial expressions, and details of character movements.

**How to enable: Settings -> Accessibility -> Voice Guide**

### 2.Hearing Impaired Function

Introduction: The hearing impaired function (hearing assistance) in digital television is an assistive technology designed specifically for users with hearing impairments, aiming to help users better understand television content through visual subtitles.

**How to enable:Settings -> Accessibility -> Subtitle Settings**

## Initial Setup

### 3.Set user preferences

Introduction: Set colour correction, font contrast, font size, focus cursor, etc.

 
**How to enable:Settings -> Accessibility -> Accessible Guide ->Large Front Guide**

## System

### System

Press **MENU** button to display the main menu.

Press **[◀]** / **[▶]** button to select System in the main menu.

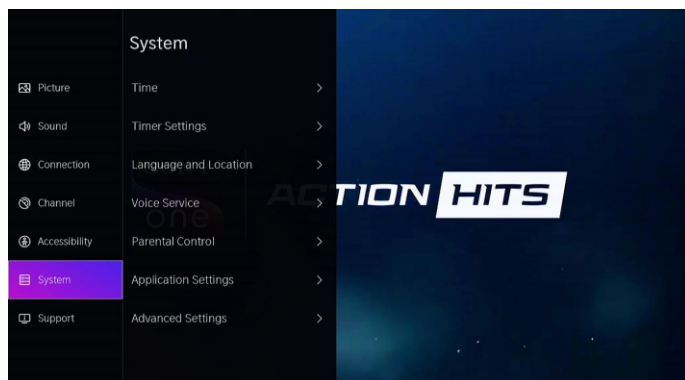


1.Press **[▼]** / **[▲]** button to select the option that you want to adjust in the System menu.

2.Press Enter button to adjust.

3.After finishing your adjustment, Press Enter button to save and return to the previous menu.

### Application Settings

 
Press **[▼]** / **[▲]** button to select Application Settings.

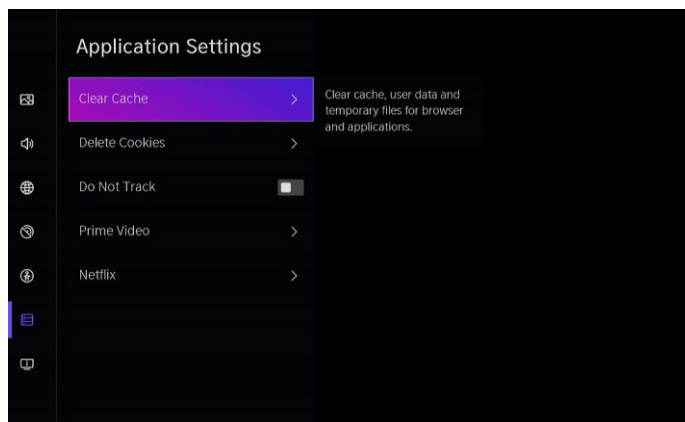

# System

## HDMI/CEC Function

 Press **▼** / **▲** button to select CEC Function, then press Enter button to enter sub-menu to select.

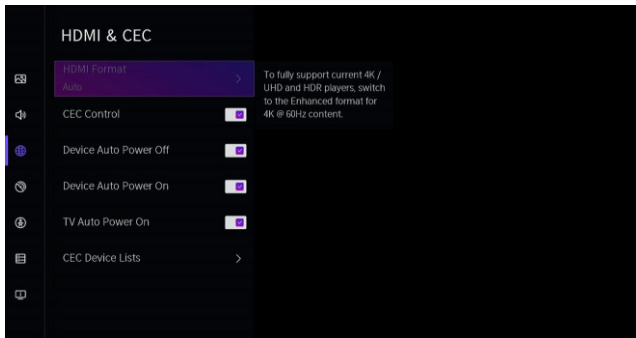


Press **▼** / **▲** button to select CEC Control/Device Auto Power On/Device Auto Power Off/TV Auto Power On/CEC Device Lists.

Note: All the Options are available only when the CEC Control select On.


## Advanced Settings

 Press **▼** / **▲** button to select Advanced Settings, then press ENTER / **▶** button to enter.

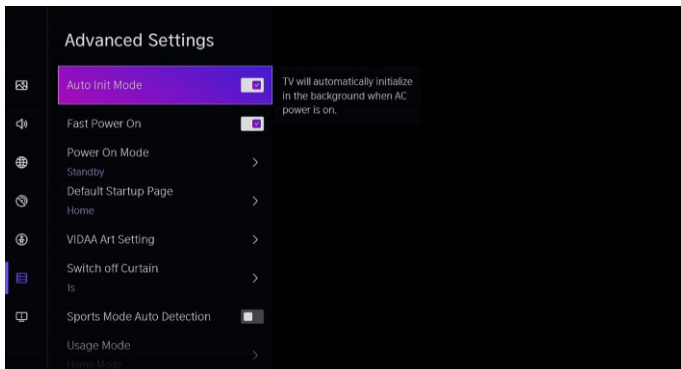

## Support

 
Press **▼** / **▲** button to select Support, then press ENTER / **▶** button to enter.

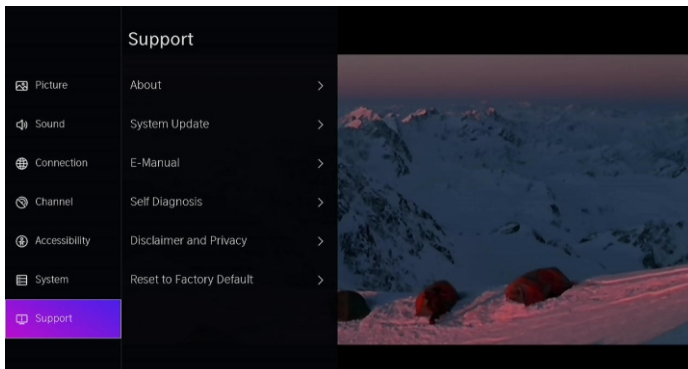

## System

### Restore To Factory Default

 
Press **【▼】 / 【▲】** button to select Restore To Factory Default, then press ENTER/ **【▶】** button to enter sub-menu and select.

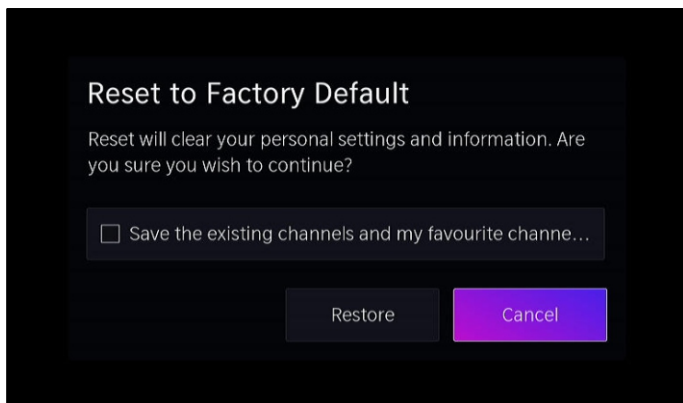

## Media

### Media

 
Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select Media on the Home page or press MEDIA button on the remote, and press OK button to enter the Media Center.

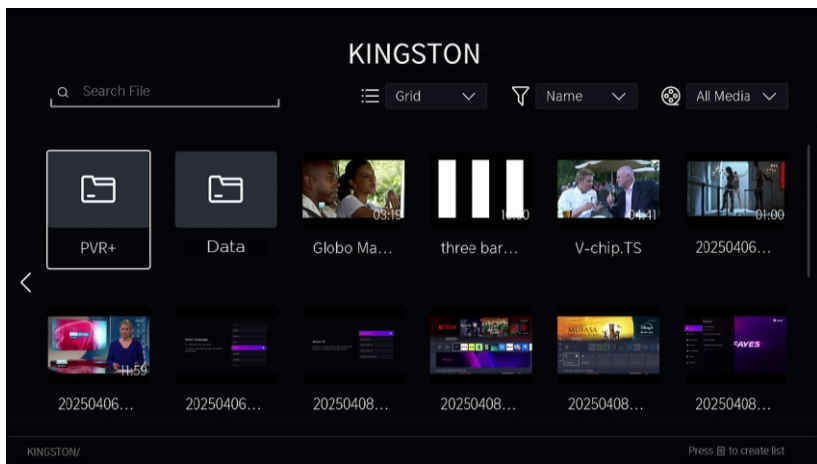

## Media


### Video

 Press **▼** / **▲** button to select Video or All, and press **▼** / **▲** / **◀** / **▶** button to select Movies. Press Menu button to display the setting options on the left side.

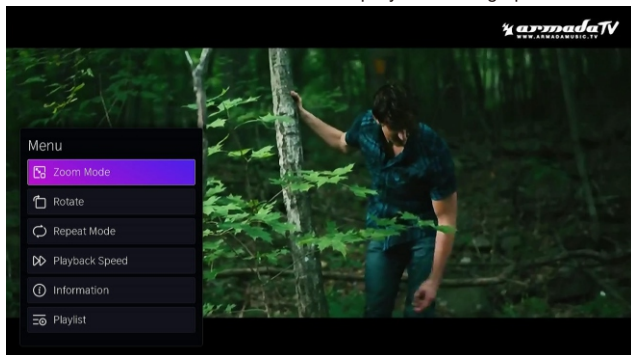

### Audio

 Press **▼** / **▲** button to select Audio or All, and press **▼** / **▲** / **◀** / **▶** button to select Music.

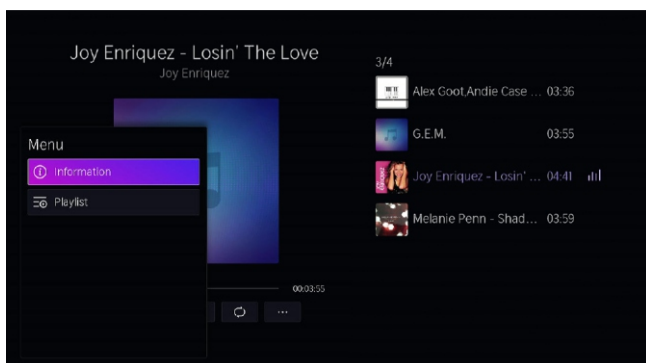

### Image

Press **▼** / **▲** button to select Image or All, and press **▼** / **▲** / **◀** / **▶** button to select Picture.



# Help

No power	<ul style="list-style-type: none"> <li>• Check if the AC cord of TV is plugged in. If there's still no power, please disconnect the plug, and reconnect to the outlet after 60 seconds. Turn the power back on.</li> </ul>
Signal not received properly	<ul style="list-style-type: none"> <li>• Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult antenna instruction manual adjust the direction of the external antenna.</li> <li>• If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>• Check if the antenna connection at the back of the TV is properly installed.</li> <li>• View other channels to see if the problem still occurs.</li> </ul>
Video appears with no audio	<ul style="list-style-type: none"> <li>• Try increasing the volume.</li> <li>• Check if the TV's sound is on mute.</li> </ul>
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> <li>• Try adjusting the contrast and brightness.</li> </ul>
Static noise affects video and audio quality	<ul style="list-style-type: none"> <li>• Check if the antenna connection at the back of the TV is properly installed.</li> </ul>
Broken lines on screen	<ul style="list-style-type: none"> <li>• Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.</li> </ul>
Remote doesn't work	<ul style="list-style-type: none"> <li>• Try using the remote at a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control.</li> <li>• The TV will go into Standby mode if it receives no response in a few minutes.</li> </ul>
No video (PC mode)	<ul style="list-style-type: none"> <li>• Please check if the cable is connected to the HDMI port correctly, or if the cable is bent or damaged.</li> </ul>
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> <li>• Adjust the brightness or contrast in the main menu.</li> </ul>
No response from the PC	<ul style="list-style-type: none"> <li>• Check if the PC's display resolution is set to a compatible resolution for the TV.</li> </ul>
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> <li>• Make sure you are using a cable which is not bent or damaged.</li> </ul>
Problems are unresolved	<ul style="list-style-type: none"> <li>• Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact <b>customer service 618-392-3456</b>.</li> </ul>

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

## List of maintenance procedures

- \*Choose a good location for the television, in a clean place, away from sources of heat (sun, radiators, fireplaces), plants (pollen, dust, water) and the ground (risk of knocks, dust).
- \*Do not place cloth, paper or other materials over the openings on the top, sides or bottom of the appliance.
- \*Switch off the television after use (unless the manufacturer's operating instructions advise against it, as is usually the case for OLED televisions) and unplug it if it is not going to be used for (if it is an OLED television, leave it on standby before unplugging it)
- \*Store the remote control carefully, do not expose it to liquids and check the condition of the remote control batteries regularly to prevent corrosion of the contacts.
- \*Clean the screen with a soft, dry cloth after switching off and unplugging the television. and avoid glass sprays and other household cleaning agents.

## Specifications

Screen Size	power Consumption	Main accessories
24"	30W/36W	User's manual x1 Remote controller x1 Power cord x1 AAA Batteries x2 (Optional)
32"	40W/56W/60W	
39"	60W/70W	
40"	60W/75W/90W	
42"	65W/75W/90W	
43"	75W/80W/90W	
50"	100W/108W/120W	
55"	110W/118W/135W	
58"	120W/135W/160W	
65"	160W/165W/190W	
75"	180W/220W/240W/270W	

★ LIFE TIME : 60,000 Hrs

	Operation Frequency	Transmitting Power
WiFi	2400~2483.5	Less Than 100mW

### WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

 
1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only using furniture that can safely support the television set.
3. Ensuring the television set is not overhanging the edge of the supporting furniture.
4. Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
6. Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Wall-mounted screw: 22-24inch M4, 28-75inch/85inch M6, 77inch/100inch M8

Note: don't hang at an angle to avoid the risk of falling off.

# Remote control

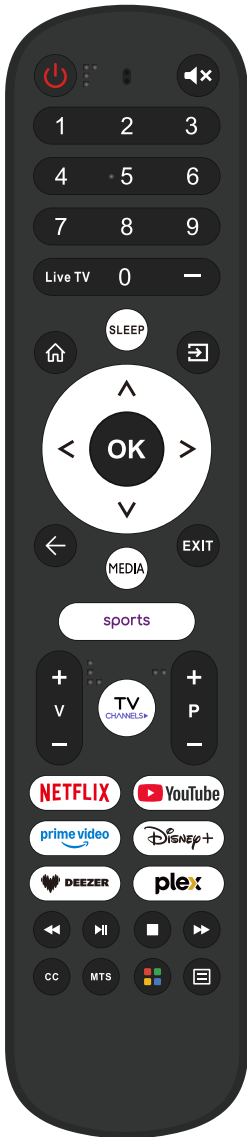

1. **POWER**: Switches the TV on or off.
2. **Mute**: Mute or restore your TV sound.
3. **0-9**: Figures 0-9 are used to directly input channel number.
4. **Live TV**: Connects to Live TV.
5. **—**: for
  - HOME: displays the home screen.
7. **SLEEP**: SLEEP T
11. **MEDIA**: Exit the on-screen menu.
13. **sports**
14. **L+/-**: Press to increase/decrease the sound level.
15. **CH+/-**: Press to scan through channels.
16. **TV CHANNELS+**: Connects to TV CHANNELS.
17. **Netflix**: Connects to NETFLIX.
18. **YouTube**: Connects to YouTube.
19. **Prime Video**: Connects to Prime Video.
20. **Disney+**: Connects to Disney+.
21. **DEEZER**: Connects to DEEZER.
22. **Plex**: Connects to PLEX.
23. **◀◀**: Fast reverse in PVR or Media Player mode.
24. **▶▶**: Play on PVR or Media Player mode.
25. **■**: Exit the playing function in PVR or Media Player mode.
26. **▶▶▶**: Fast forward in PVR or Media Player mode.
27. **cc**:

Serial # \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Place of Purchase \_\_\_\_\_

Your receipt is required to verify your proof of purchase, please attach a copy of your receipt here for your records.



# *limited* **WARRANTY**

Elitelux Technologies warrants this product to be free from manufacturing defects in material and workmanship under normal use and conditions for a period of 1 year from date of original purchase.

Should service be necessary under this warranty for any reason due to a manufacturing defect or malfunction during the first 12 months from date of original purchase, Elitelux will provide carry-in service for units with a screen size of 49 inches or below, and in-home service for units 50 inches or greater in screen size by a Elitelux authorized Independent Service Center at no charge. Also, if an original part fails due to manufacturing defect in material and workmanship within one year from date of original purchase we will replace the defective part, provided the defect or malfunction is verified along with dated proof of purchase.

There are Elitelux authorized Independent Service Centers located throughout the country. For the one nearest you, DIAL: 1-618-392-3456. Elitelux will not be liable for damages incurred in shipment of the unit. If there are no Elitelux authorized Independent Service Centers in your area please call for assistance.

Note: This warranty is void if the product is:

- (a) Damaged through negligence, misuse, abuse, or accident.
- (b) Used in a commercial application or rentals.
- (c) Modified or repaired by anyone other than an Independent Service Center authorized by Elitelux to effect warranty repairs to the class of product.
- (d) Damaged because it is improperly connected to the equipment of other manufacturers.

This warranty does not cover:

- (a) Damage to equipment not properly connected to the product.
- (b) Costs incurred in the shipping of the product to a Elitelux authorized Independent Service Center.
- (c) Damage or improper operation of unit caused by customer abuse, misuse, negligence, or failure to follow operating instructions provided with the product.
- (d) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (e) Signal reception problems caused by external antenna or cable systems.

THIS WARRANTY IS NON TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESS WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED SHALL APPLY TO THIS PRODUCT THEREAFTER. ELITELUX MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE AND USE.

UNDER NO CIRCUMSTANCES SHALL ELITELUX BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

IN THE UNITED STATES OF AMERICA THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, HOWEVER YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATION ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

**ELITELUX TECHNOLOGIES, INC.**  
3471 N. Union Drive  
Olney, IL 62450  
618-392-3456